


## INSTRUCTION MANUAL

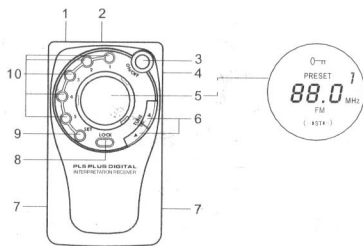

## CONTROL LOCATION

1. HEADPHONE JACK
2. VOLUME CONTROL
3. POWER ON/OFF BUTTON
4. FM MONO/STEREO SWITCH
5. LCD DISPLAY
6. TUNING BUTTONS
7. BATTERY COMPARTMENT
8. KEY LOCK BUTTON
9. SET MEMORY BUTTON
10. STATION PRESET BUTTONS

## POWER SUPPLY

Slide off the cover of the Battery Compartment (7) at the back of the unit and insert two "AAA" (RO3/UM4) size batteries. Ensure that the batteries are inserted with the correct polarities.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

If the LCD Display (5) goes flashing or shuts off during operation, the batteries should be replaced.

## OPERATION

1. Press the Power On/Off Button (3) once to switch on the unit.
2. Insert the earphone plug into the Headphone Jack (1).
3. Press the Tuning Button (6)
4. - A higher frequency can be selected by pressing the "UP" button and lower frequency by pressing the "DOWN" button.
  - Press either button for more than 1 second to activate the automatic tuning mode. The tuning stops automatically when a strong signal is received. \*\*Press the "UP" or "DOWN" button stepwise to adjust for the best reception if needed.
  - Press the Tuning Button again to select other desired stations.
5. Adjust the Volume Control (2) to the desired level.
6. Set the FM Mono/Stereo Switch (4) to your preference.

## PRESET TUNING

Once the desired stations are stored in the memory, they can easily be recalled. Up to 5 stations in each band can be stored in memory.

- Tune to a desired station according to the tuning procedure.
- To save the station frequency into the memory, perform the following steps: Press the Set Button (9). The PRESET indicator will appear on the display (5) and will flash. Press one of the Station Preset Buttons (10), i.e. 1 to 5. The station frequency will be stored on that particular channel. Store the desired frequency when the Preset indicator is flashing. If no station Preset Button is pressed within 15 seconds, the PRESET indicator will turn off, and the station setting will not be saved.

## MEMORY RECALL

- Press the relevant Station Preset Button once, and the stored station frequency will be recalled.

## MEMORY BACKUP OF STORED STATIONS

- Once the batteries are low, the LCD display goes flashing or shuts off. Switch off the unit and replace with new batteries.

### CAUTION


If the batteries have been removed for more than 1 minute, the station preset will go back to its original setting.

## KEY LOCK

When the Key Lock Button (8) is pressed, the "KEY LOCK" indicator will appear on the display. All buttons will be locked, except the volume dial. To release the key lock function, press the Key Lock Button (8) once again.

## NOTES

- As soon as the batteries are inserted, the unit will be switched on.
- During operation, the earphone cord works as an antenna. To ensure the best reception, stretch the earphone cord (antenna) to its maximum length and do not fold it.
- Reception sensitivity may depend on the placement of the earphone cord. Try to determine the cord position with the best result.

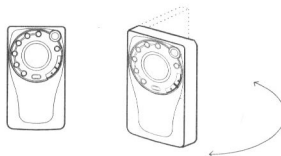

## Specification

Frequency Range: FM 72 - 88 MHz

Antenna : Earphone Cord

10% THD

Output Power: Earphones 15mW+ 15 mW

Battery : 3VDC (1.5V x 2)"AAA"/RO3/UM4

Accessory: Stereo Dynamic Earphones (1 Pair)

\* Specifications and product designs are subject to change without notice.